

LE600AG

 


PRODUCT MANUAL

PEAKPULSE LE600AG GOLF RANGEFINDER




- ① Laser Lens
- ② Magnification Lens
- ③ Yards/Meters
- ④ Power Button
- ⑤ Adjustable Eyepiece
- ⑥ Battery Door

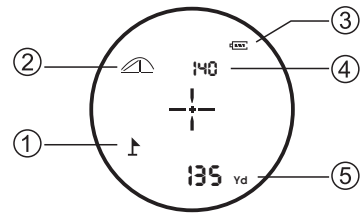

- ① Pin Acquisition Indicator
- ② Slope Mode Indicator
- ③ Battery Life
- ④ Slope Adjusted Yardage
- ⑤ Distance Measurement + Yards/Meters

 SLOPE / NON-SLOPE

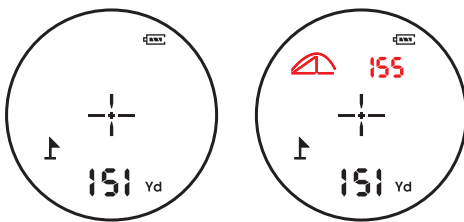

Non-slope


Slope



HOW TO USE

1. Look through the eyepiece and press the power button to turn on the rangefinder. The crosshair will appear in the middle of the screen.
2. Adjust the focus of the rangefinder by rotating the dial left or right until the display appears sharp.
3. Point the crosshair at the target--flag, tree, bunker, etc. Then press and release the POWER button to "shoot your target".
4. If slope is on, the slope-adjusted distance will appear above the crosshair. Then non-slope distance will appear below the crosshair.
5. The rangefinder will automatically turn off after 10 seconds.

YARDS / METERS

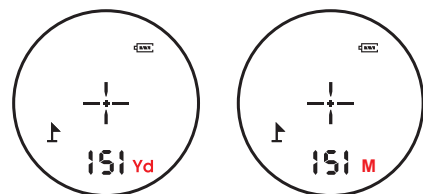

Press the MODE button once to change between yards and meters. You will see a **Yd** in the bottom right-hand corner for Yards and a **M** for Meters.

M - Meters **Yd** - Yards